



**2** - WINDOW HEAD - EXISTING BRICK

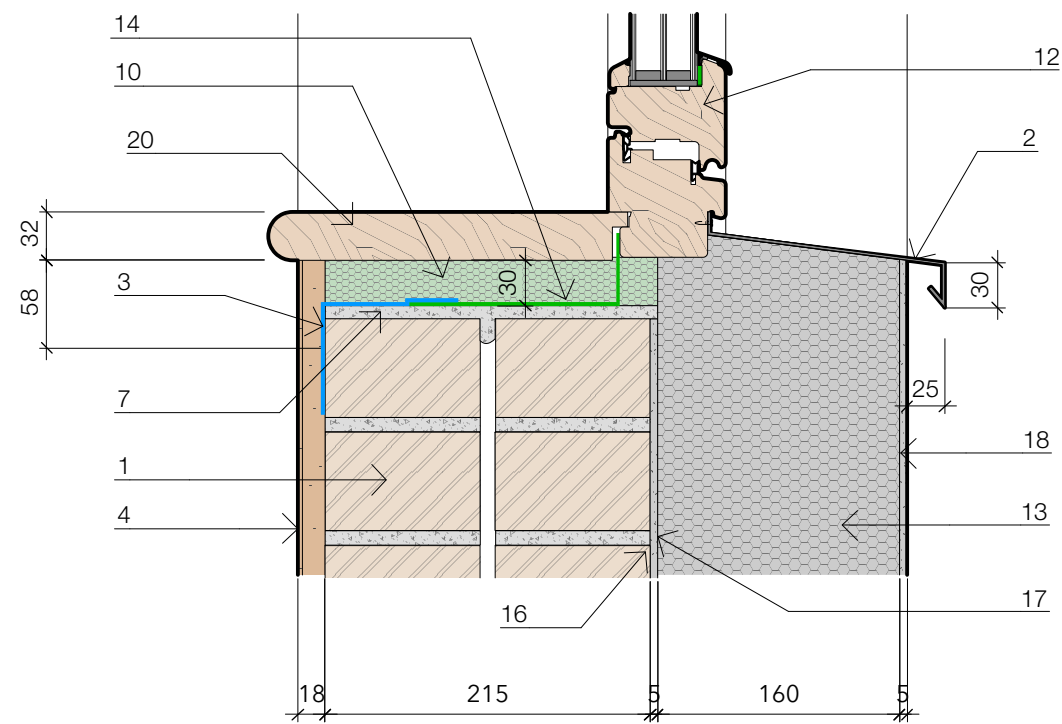

**1** - WINDOW SILL - EXISTING BRICK

1. Existing solid brickwork wall
2. Powder-coated aluminium window sills
3. Pro Clima Conetga FC or Pro Clima Conetga PV or Illbruck ME410 Window Butyl Tape Fleece
4. Existing lime plaster made good + 3 mm skim
5. Form drip edge in render
6. 50 mm EPS insulation to head and jambs
7. Levelling mortar to existing sill
8. Galvanised steel window straps at 600 mm centres
9. Softwood window sill board
10. Fill gap to underside of window board with polyurethane expanding foam
11. Sealant
12. Ecocontract triple glazed timber windows
13. Graphite enhanced EPS external wall insulation
14. Pro Clima Tescon Profil or Illbruck ME500 Duo Flexible Window Membrane E
15. Fill gaps with polyurethane expanding foam
16. Existing pebbledash, removed, loose material removed and brickwork re-pointed as necessary, ready for EWI adhesive
17. Acrylic adhesive
18. Acrylic render
19. Existing concrete lintel
20. 32 mm softwood window sill board

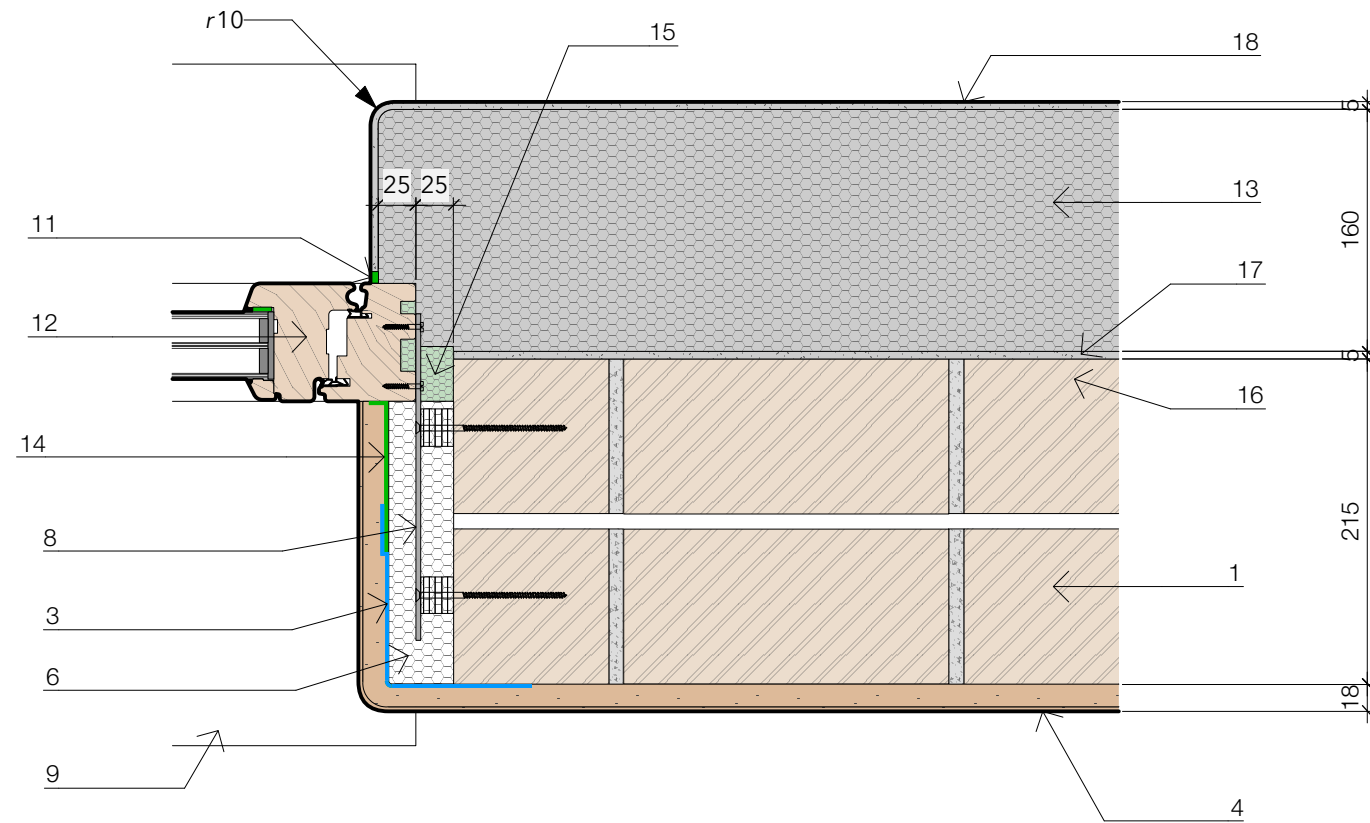

**3** - WINDOW JAMB - EXISTING BRICK